




 

 

 



 

 



 

 

 

 

 

 

 






Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Pre Ch
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Nicam	 Options

Original	Rechange
 Sleep	 Sleep
 Source	 AV
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Info	 Info
 Media	 Media
 Freeze	 Smart
 Aspect	 3D
 EPG	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu	 Menu





Original		Recharge		Original		Recharge	
	Exit		Exit		Green		Green
	Text		Text		Yellow		Yellow
	Play		Play		Blue		Blue
	Pause		Pause				
	Stop/Hold		Stop				
	<<		<<				
	Size		Format				
	>>/Reveal		>>				
	I<</Index		I<<				
	>>I/Subpage		>>I				
	Lang		Dual				
	Subtitle		Subt				
	Rec		Rec				
	R.List		List				
	TV/Radio		TV/R				
	Timeshift		Back				
	Red		Red				

