 




| Original | | Rechange | | Original | | Rechange | |
|---|----------------|---|--------|---|-----------|---|---------|
|  | Power |  | Power |  | CH/Page- |  | Ch - |
|  | Sleep |  | Sleep |  | Eco |  | 3D |
|  | CBL/SAT |  | 1 |  | Vol+ |  | Vol + |
|  | DVD |  | 2 |  | Vol- |  | Vol - |
|  | Blu-ray |  | 3 |  | Mute |  | Mute |
|  | Game |  | 4 |  | Info |  | Info |
|  | AUX1 |  | 5 |  | Option |  | Options |
|  | Media Player |  | 6 |  | Up |  | Up |
|  | TV/Audio |  | 7 |  | Down |  | Down |
|  | AUX2 |  | 8 |  | Right |  | Right |
|  | Tuner |  | 9 |  | Left |  | Left |
|  | USB |  | Guide |  | Enter |  | Ok |
|  | CD |  | 0 |  | Back |  | Back |
|  | Bluetooth |  | Pre Ch |  | Setup |  | Menu |
|  | Internet Radio |  | Smart |  | I<</Tune- |  | I<< |
|  | CH/Page+ |  | Ch + |  | Play |  | Play |
| | | | |  | Pause |  | Pause |

 



 
 
 
 
 







 
 


 
 
 


 

 








| Original | | Rechange | | Original | | Rechange | |
|---|----------------|---|---------|----------|--|----------|--|
|  | >> /Tune+ |  | >> | | | | |
|  | Smart Select 1 |  | D. Menu | | | | |
|  | Smart Select 2 |  | Text | | | | |
|  | Smart Select 3 |  | Eject | | | | |
|  | Smart Select 4 |  | AV | | | | |
|  | Green/Movie |  | Green | | | | |
|  | Red/Music |  | Red | | | | |
|  | Blue/Game |  | Blue | | | | |
|  | Yellow/Pure |  | Yellow | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |





| Original | Rechange |
|--|--|
|  Power |  Power |
|  Sleep |  Sleep |
|  CBL/SAT |  1 |
|  DVD |  2 |
|  Blu-ray |  3 |
|  Game |  4 |
|  AUX1 |  5 |
|  Media Player |  6 |
|  TV Audio |  7 |
|  AUX2 |  8 |
|  Tuner |  9 |
|  USB |  Guide |
|  CD |  0 |
|  Bluetooth |  Pre Ch |
|  Internet Radio |  Smart |
|  CH/Page+ |  Media |
| CH/Page- | Ch + |

| Original | Rechange |
|--|---|
|  CH/Page- |  Ch - |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Mute |  Mute |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  Back |  Back |
|  I<</Tune- |  I<< |
|  Play |  Play |
|  Pause |  Pause |
|  >>I/Tune+ |  >>I |
|  Smart Select 1 |  D. Menu |
|  Smart Select 2 |  Text |
| Smart Select 3 | Eject |





| Original | | Recharge | | Original | | Recharge | |
|----------|----------------|----------|----|----------|--|----------|--|
| | Smart Select 4 | | AV | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

