



Original	Rechange
Standby	Power
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Display	Info
Recall	Back
Setup	Menu
EPG	Guide
Source	AV

Original	Rechange
Audio	Dual
Subtitle	Subt
CH.List	List
FAV	Pre Ch
Up	Up
Down	Down
Right	Right
Left	Left
Ok	Ok
Vol+	Vol +
Vol-	Vol -
Exit/Cancel	Exit
S.Mode	Shift + Dual
P.Mode	Format
CH+/Page+	Ch +
CH-/Page-	Ch -
Red/Goto	Red



