









 



 
 


 

 





Original		Rechange		Original		Rechange	
	Power		Power		Exit		Exit
	[≡i]/Info		Info		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		Enter		Ok
	5		5		CH+		Ch +
	6		6		CH-		Ch -
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		Mute		Mute
	0		0		List		List
	[≡?]/Source		AV		Sleep		Sleep
	O)I/II/Audio		Dual		EPG		Guide
	Menu		Menu		♥		Pre Ch
	[≡♦]/[+]		3D		Red		Red
	Recall		Back		Green		Green





Original		Recharge		Original	Recharge
	Yellow		Yellow		
	Blue		Blue		
	<<		<<		
	>>		>>		
	I<<		I<<		
	>>I		>>I		
	Play		Play		
	Pause		Pause		
	Stop		Stop		
	Rec		Rec		
	[≡]		Text		
	[≡+]/Still		Format		
	[≡o]/Subtitle		Subt		
	Radio		TV/R		
	[≡x]		Options		
	DMP		Smart		
	Index		Media		

