

 

 

 



 
 
 
 
 
 

 
 

 
 

 
 
 
 
 

 








	Original	Rechange
	Power	 Power
	ShowView	 Smart
	Rec Check	 3D
	Ext Link	 Text
	Rec	 Rec
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	--/--	 Guide
	AV/Input Select	 AV

	Original	Rechange
	Tracking/V-Lock+	 Ch +
	Tracking/V-Lock-	 Ch -
	Vol+	 Vol +
	Vol-	 Vol -
	I<< Index	 I<<
	Index >>I	 >>I
	<<	 <<
	>>	 >>
	Stop	 Stop
	Pause/Step	 Pause
	Play	 Play
	Prog Play	 Options
	Menu	 Menu
	Display	 Info
	Exit	 Exit
	Up	 Up
	Down	 Down



 


 


 

 






 



 

 

 

 


 

 
 








 



 













 
 

 








Original		Recharge		Original	Recharge
	Right		Right		
	Left		Left		
	Enter		Ok		
	Prog/Check		Sleep		
	Timer		Shift + AV		
	Output		TV/R		
	AV Link		Media		
	Audio		Dual		
	Tv Aspect/Off		Format		
	Music w/Picture		List		
	A/Cancel Reset		Red		
	B/I-Timer		Green		
	C/SP/LP/EP		Yellow		
	D/VPS/PDC		Blue		





Original	Rechange
 Power	 Power
 Rec Check	 3D
 Ext Link	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 >10	 Guide
 AV/Input Select	 AV
 Tracking/V-Lock/C	 Ch +
 Tracking/V-Lock/C	 Ch -

Original	Rechange
 Vol+	 Vol +
 Vol-	 Vol -
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause/Step	 Pause
 Play	 Play
 Top Menu/Direct Navigator	 Menu
 Play List	 List
 Display	 Info
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left


 

 



 





Original		Rechange		Original	Rechange
	Enter		Ok		
	Timer	+	Shift + AV		
	Quick Replay		D. Menu		
	Output		TV/R		
	Subtitle		Subt		
	Audio		Dual		
	Angle/Page		Smart		
	Music w/Picture		Pre Ch		
	Play Mode	+	Shift + Play		
	Zoom		Eject		
	Repeat		Text		
	Position		Options		
	A/Cancel Reset		Red		
	B/Cinema		Green		
	C/Group		Yellow		
	D/Setup		Blue		





Original	Rechange	Original	Rechange
 Power	 Power	 Tv Aspect	 Format
 1	 1	 A	 Red
 2	 2	 B	 Green
 3	 3	 C	 Yellow
 4	 4	 D	 Blue
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 -/--	 GUIDE		
 AV	 AV		
 CH+	 Ch +		
 CH-	 Ch -		
 Vol+	 Vol +		
 Vol-	 Vol -		

Original	Rechange	Original	Rechange
 Tv Aspect	 Format		
 A	 Red		
 B	 Green		
 C	 Yellow		
 D	 Blue		

