 




| Original  | Recharge  |
|---|---|
|  Power       |  Power   |
|  Sleep       |  Sleep   |
|  CD          |  1       |
|  iPod        |  2       |
|  AUX         |  3       |
|  Tuner       |  4       |
|  USB         |  6       |
|  Folder Down |  Ch -    |
|  Folder Up   |  Ch +    |
|              |          |
|            |        |
|  Up        |  Up    |
|  Down      |  Down  |
|  Right     |  Right |
|  Left      |  Left  |
|  Enter     |  Ok    |
|  Menu      |  Menu  |

| Original  | Recharge   |
|---|--|
|  Play        |  Play     |
|  Pause       |  Pause    |
|  >>I         |  >>I      |
|  I<<         |  I<<      |
|  Stop        |  Stop     |
|  Option      |  Options  |
|  Back        |  Back     |
|  X           |  Media    |
|  Display     |  Info     |
|  Vol+        |  Vol +    |
|  Vol-      |  Vol -  |
|  Mute      |  Mute   |
|  << Tuning |  Red    |
|  Tuning >> |  Green  |
|  < Preset  |  Yellow |
|  Memory    |  TV/R   |
|  Preset >  |  Blue   |

