

 






 


 
 

 
 
 

 


 

 


 

 

 











 








 
 

 

 


 


 



 


 

 




 





	Original	Rechange	Original	Rechange
	Power			<<
	Open/Close			>>
	1			<<
	2			DVD Menu
	3			Title
	4			Display
	5			Return
	6			Enter
	7			Up
	8			Down
	9			Right
	0			Left
	Clear			O)/Audio
	Play			[...]/Subtitle
	Pause/Step			Camera/Angle
	Stop			Setup
	>>			Marker
				Dual
				Subt
				Options
				Menu
				Media





Original	Recharge	Original	Recharge
 Search	 TV/R		
 Program	 Sleep		
 Zoom	 Shift + Eject		
 Repeat	 Text		
 A-B	 3D		
 Random	 Smart		
 Resolution	 Format		
 Power Tv	 Shift + Power		
 AV Tv	 AV		
 PR/CH+ Tv	 Ch +		
 PR/CH- Tv	 Ch -		
 Vol+ Tv	 Vol +		
 Vol- Tv	 Vol -		

