 

 




 


 
 

 
 
 




Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu
	Tv		TV/R		Return		Back
	1		1		Info		Info
	2		2		Exit		Exit
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		Enter		Eject
	8		8		Red		Red
	9		9		Green		Green
	0		0		Yellow		Yellow
	Enter		Ok		Blue		Blue
	PRE-CH		Pre Ch		Vol+		Vol +
	CH LIST		List		Vol-		Vol -
	FAV CH		Shift + Pre Ch		Mute		Mute
	Tools		Options		Source		AV





Original		Rechange		Original		Rechange	
	PR+		Ch +				
	PR-		Ch -				
	TTX/MIX		Text				
	Media.P		Media				
	P.Size		Format				
	Dual		Dual				
	Guide		Guide				
	Subt		Subt				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

