


Original		Rechange		Original		Rechange	
	Power Disc		Power		Vol+		Vol +
	Disc		Red		Vol-		Vol -
	Play/Pause Disc		Ok		Preset+ Disc		Ch +
	Sleep		Sleep		Preset- Disc		Ch -
	Prog Disc		Options		I> Disc		Right
	>> Disc		Up		<I Disc		Left
	<< Disc		Down		Clock/Display Tun-AUX-Tape		Shift + 3D
	Tun		Green		Prog Tun		Shift + Options
	Power Tun		Shift + Power		Preset+ Tun		Shift + Ch +
	Rep All		Text		Preset- Tun		Shift + Ch -
	Shuf		AV		Stop Tun		Shift + Stop
	Clock/Display Disc		3D		>> Tun		Shift + Up
	Timer		Shift + AV		<< Tun		Shift + Down
	On/Off Timer		Guide		AUX		Yellow
	DBB		TV/R		Power AUX		Media
	Stop Disc		Stop		Stop AUX		Pause
	Mute		Mute		Tape		Blue

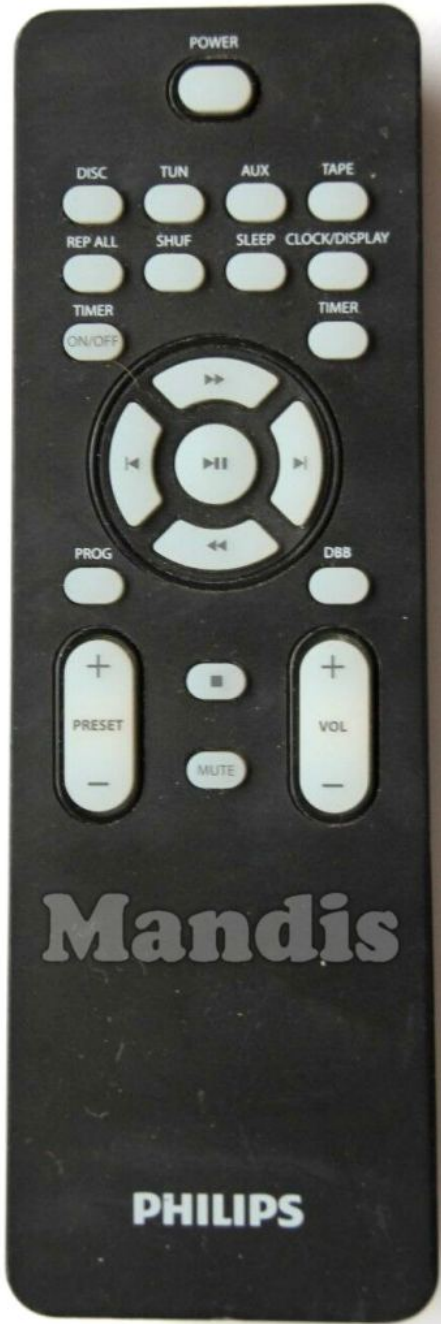



	Original	Recharge	Original	Recharge
	Power Tape	+  Shift + Media		
	Play/Pause	Play		
	Stop Tape	+  Shift + Pause		

