



 
 

 



 

 



 



 
 


 


 
 


 


 




 


 



 



 


 



 
 


 



 
 




Original		Rechange		Original		Rechange	
	Power		Power		1		1
	Mute		Mute		2		2
	TV/AV		AV		3		3
	Multimedia		Media		4		4
	I/II		Dual		5		5
	List		List		6		6
	Menu		Menu		7		7
	Q.View		Options		8		8
	OK		Ok		9		9
	Up		Up		0		0
	Down		Down		SSM		Guide
	Right		Right		PSM		Pre Ch
	Left		Left		ARC		Back
	PR+		Ch +		Sleep		Sleep
	PR-		Ch -		Text		Text
	Vol+		Vol +		[≡x]/Update		Subt
	Vol-		Vol -		[≡o]/Time		TV/R





Original		Rechange	
	Blue		Blue
	Yellow		Yellow
	Green		Green
	Red		Red
	[≡◆]/Size		Format
	[/≡]/Mix		3D
	[≡+]/Hold		Eject
	[≡?]/Reveal		D. Menu
	[≡i]/Index		Info
	[≡M]/Mode		Smart

Original	Rechange

