



Original		Rechange		Original		Rechange	
	Power		Power		Text		Text / Goto
	Eject		Eject / Surround		Subtitle		Subtitle / EQ
	Tv/Radio		TV/Radio /		1		1
	Media		Shift + Display / Media		2		2
	Play		Play / Slow		3		3
	Pause		Pause / Step / Freeze		4		4
	<</Size		Zoom / Size		5		5
	<</Size		<< / Tune-		6		6
	>>/Subpage		>> / Tune+		7		7
	Rec/D.Setup		Setup / OPT /		8		8
	Rec/D.Setup		Rec / Rec Mode		9		9
	Stop		Stop / Hold		-/--		Shift + Guide / EPG / -/--
	I<</FAV		Fav / Marker / PC		0		0
	I<</FAV		I<< / Preset-		Recall		Back / Return
	>>I/Index		>>I / Preset+		Vol+		Vol+
	Lang/Audio		Audio / Lang I/II		Mute		Mute / Dimmer
	Hold		Shift + Stop /		CH+		CH+ / Page+

Hold





Original	Recharge
 Vol-	 Vol-
 CH-	 CH- / Page-
 Red/Goto	 Shift + Text /
 Red/Goto	 Red / Netflix / Search
 Green/Angle	 Info / Angle
 Green/Angle	 Green / APP / Repeat
 Yellow/Repeat	 Shift + Green / APP /
 Yellow/Repeat	 Yellow / YouTube / Repeat
 Blue/A-B	 Shift + Yellow / YouTube /
 Blue/A-B	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Display	 Display / Media
 Title/Exit	 Exit / Cancel / Clear
 Title/Exit	 Sound / Title
 Up	 Up
 Left	 Left
 OK	 OK

Original	Recharge
 Right	 Right
 Down	 Down
 Source	 AV / Input / RDS
 EPG/D.Menu	 D.Menu / Top
 EPG/D.Menu	 Guide / EPG / -/-

