



	Original	Rechange	Original	Rechange
	Power			Pause
	Sleep			Stop
	Display			Clear
	Clock/Timer			EQ
	Clock/Timer Set			Folder+
	Tuner Memory			Folder-
	Play Mode/Tuning Mode			Vol+
	Repeat FM			Vol-
	USB			Enter
	CD			
	Band/Tuner			
	Function			
	I<</-			
	>>I/+			
	<</+			
	>>/-			
	Play			

