



 




 


 
 

 
 
 
 

 
 






 


 
 
 

 
 

 
 
 

 
 



 
 
 
 
 
 
 
 
 

 

 













 




 




Original	Rechange	Original	Rechange
 Power	 Power	 Vol-	 Vol -
 Mute	 Mute	 I<</RDS PTY	 I<<
 Function	 Menu	 >>I	 >>I
 Sound	 Dual	 <<	 <<
 EQ	 Subt	 >>/RDS Display	 >>
 DVD	 Media	 Stop	 Stop
 1/Timer On/Off	 1	 Play	 Play
 2/Timer/Clock	 2	 Pause	 Pause
 3/Sleep	 3	 Repeat	 Text
 4/Disc Menu	 4	 Home	 Smart
 5/Title Menu	 5	 USB Rec	 Rec
 6	 6	 Tools	 Options
 7	 7	 Info	 Info
 8/SYNC	 8	 Return	 Back
 9	 9	 Exit	 Exit
 0	 0	 Up/Tuning Up	 Up
 Vol+	 Vol +	 Down/Tuning	 Down



Down



Original		Rechange		Original		Rechange	
	Right/#		Right				
	Left/b		Left				
	Enter		Ok				
	Red/Display		Red				
	GreenMo/ST		Green				
	Yellow		Yellow				
	Blue/Keycon		Blue				
	Speed/CD Rec		3D				
	My Karaoke		TV/R				
	Mic Vol+		Ch +				
	Mic Vol-		Ch -				

