 

 
 


 
 

 




 





 

 
 


 

 


 
 

 


 

 






 



 
 
 




	Original	Rechange		Original	Rechange
	Power		Power		>> /Subpage
	Source		AV		Menu
	Red		Red		Exit
	Green		Green		Up
	Yellow		Yellow		Down
	Blue		Blue		Right
	e		Media		Left
	Mouse		Options		Enter
	Home		Smart		Play
	TXT		Text		Pause
	Mix/FAV.List		List		Stop
	Size/Subtitle		Format		Vol +
	Cancel/Audio		Dual		Vol -
	↔/Refresh		Pre Ch		Mute
	<</Index		<<		Ch +
	>>/Hold		>>		Ch -
	<</Reveal		<<		Tv/Radio
					TV/R





Original		Recharge	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[*]/Display		Info
	Recall		Back

Original		Recharge	

