






 

 

 

 



 

 

 

 

 
 


 
 





 






 

 

 
 
Original	Rechange
 Power	 Power
 TV/DTV	 Smart
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 Info	 Info
 FAV	 Shift + Pre Ch
 Picture	 Shift + Format

Original	Rechange
 Sound	 Shift + Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 EPG	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I/II	 Dual
 Still	 Format
 Zoom	 Eject
 Exit	 Exit





Original	Recharge
 Radio	 TV/R
 Next	 >>I
 Lang	 List
 Subtitle	 Subt
 Back	 Back
 Forward	 >>
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text
 Size/PIP	 3D
 Reveal/Swap	 Options
 Cancel/CH Up	 Shift + Ch +

Original	Recharge
 Mix/CH Down	 Shift + Ch -
 Subcode/Source	 Shift + AV
 Index/Position	 Media
 Hold/Sleep	 Sleep

