 
 
 
 


 




 





 
 
 

 


 


 


 



 
 

 
 
 
 






	Original	Recharge		Original	Recharge
	Continue		Options		Repeat
	Shuffle		TV/R		Fader
	Program		Sleep		Play
	1		1		Pause
	2		2		Stop
	3		3		I<< AMS
	4		4		AMS >>I
	5		5		<<
	6		6		>>
	7		7		
	8		8		
	9		9		
	10		0		
	>10		Guide		
	Clear		Exit		
	Time		AV		
	Check		Media		

