



 



















 



 
 




 
 

 




 
 


 

 
 

 
 



 











 
 
 
 
 

 



 





	Original	Rechange		Original	Rechange
	Step		Power		Angle
	Search		TV/R		Audio
	Mute		Mute		Menu PBC
	Source		AV		Title
	1		1		Mode
	2		2		Setup
	3		3		Vol+
	4		4		Vol-
	5		5		Repeat
	6		6		Slow
	7		7		Program
	8		8		Zoom
	9		9		Up
	0		0		Down
	10+		Guide		Right
	Display		Info		Left
	Subtitle		Subt		Enter
					Red
					Dual
					Menu
					3D
					Exit
					Options
					Vol +
					Vol -
					Text
					Format
					Sleep
					Eject
					Up
					Down
					Right
					Left
					Ok





	Original	Rechange	Original	Rechange
	Play	 Play		
	Pause	 Pause		
	Stop	 Stop		
	>>	 >>		
	<<	 <<		
	>>	 >>		
	<<	 <<		

