





 











 





 



 


 


 


 


 











	Original	Rechange		Original	Rechange
	Power		Power		9
	Hi-Lite		Smart		0
	Previous		Back		Track
	Best		Menu		Disc
	Repeat		Text		Disc+
	Mode		Media		Disc-
	Program		Sleep		>>
	Clear		Exit		<<
	Display		Info		>>
	1		1		<<
	2		2		Stop
	3		3		Pause
	4		4		Play
	5		5		Random
	6		6		
	7		7		
	8		8		

