
 




 
 







	Original	Rechange	Original	Rechange
	 Power	 Power	 <</Tune-	 <<
	 Dimmer	 Subt	 Stop	 Stop
	 Clock	 AV	 >>/Tune+	 >>
	 Sleep	 Sleep	 Favorite ADD	 Ch +
	 Internet Radio	 Red	 Favorite Call	 Ch -
	 Online Music	 Green	 SDB Tone	 Pre Ch
	 Music Server	 Yellow	 Vol+	 Vol +
	 Tuner	 Blue	 Vol-	 Vol -
	 Analog In	 Smart	 Mute	 Mute
	 Digital In	 3D	 Top Menu	 Menu
	 iPod	 Dual	 Info	 Info
	 USB	 List	 Search	 Shift + TV/R
	 CD	 Format	 Setup	 Options
	 I<</CH-	 I<<	 Up	 Up
	 Play	 Play	 Down	 Down
	 Pause	 Pause	 Right	 Right
	 >>/CH+	 >>I	 Left	 Left





Original		Rechange		Original	Rechange
	Enter		Ok		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	+10a/A		Guide		
	Clear		Exit		
	Random		Media		
	Repeat		Text		
	Program	 + 	Shift + Sleep		
	Mode		TV/R		

