 

 




 

 



 

 

 

 


 
 

 

 

 







Original	Rechange
 Standby/On	 Power
 1/5Beam	 1
 2/ST+3Beam	 2
 3/3Beam	 3
 4/Stereo	 4
 5/Target	 5
 6	 6
 7/Music	 7
 8/Movie	 8
 9/Vol Mode	 9
 0/Sports	 0
 +10/Off	 Guide / EPG / -/--
 Surround	 Eject / Surround
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left

Original	Rechange
 AUX	 Smart / List
 Enter	 OK
 Menu	 Menu / Home
 Return	 Back / Return
 Test	 Text / Goto
 CH Level	 Info / Angle
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 (o)	 Sound / Title
 Input Mode	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Power AUX	 Shift + Power
 1 AUX	 Shift + 1
 2 AUX	 Shift + 2
 3 AUX	 Shift + 3
 4 AUX	 Shift + 4





 



	Original	Recharge	
TARGET 5	5 AUX	SHIFT + 5	Shift + 5
6	6 AUX	SHIFT + 6	Shift + 6
MUSIC 7	7 AUX	SHIFT + AUX - HDD	Shift + 7
MOVIE 8	8 AUX	SHIFT + USB	Shift + 8
VOL MODE 9	9 AUX	SHIFT + BLUETOOTH	Shift + 9
SPORTS 0	0 AUX	SHIFT + HDMI - SAT	Shift + 0

	Original	Recharge





Original		Rechange	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Tv Vol+		Vol+
	Tv Vol-		Vol-
	Tv Input		AV / Input / RDS
	Tv Mute		Mute / Dimmer

Original		Rechange	
	Input 1		Smart / List
	Input 2		Display / Media



 

 

 

 



 



 
 
 

 

 



 





 
 


Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/--
 Menu	 Menu / Home
 Return	 Back / Return
 Play	 Play / Slow
 <<	 << / Tune-
 >>	 >> / Tune+

Original	Rechange
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 STB	 Shift + 3





Original	Rechange	Original	Rechange
 Power	 Power		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Play	 Play / Slow		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		

Original	Rechange

