



Original	Recharge
Power Audio	Power
Power TV	Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
10	Guide
≥10	Pre Ch
Tv/Video	TV/R
Title/Group	D. Menu
Repeat	Text

Original	Recharge
A-B RPT	Shift + 2
Sleep	Sleep
Top Menu	Shift + Menu
Dimmer	Smart
Menu PL	Menu
FL Display	Shift + Info
Setting	Options
On Screen	3D
PTY Search	Shift + Up
Display	Info
Set Up	Shift + Options
TA/News/Info	Shift + Down
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok





Original	Recharge
+ PTY	+ Shift + Right
- PTY	+ Shift + Left
Play DVD	Play
Play USB	List
FM/AM	+ Shift + TV/R
Stop / Memory	Stop
TV Sound	+ Shift + Dual
Pause/FM Mode	Pause
I<< / Tuning-	I<<
>>I / Tuning+	>>I
Surround	Media
<< / Slow-	<<
>> / Slow+	>>
Back	Back
Return	+ Shift + Back
Subtitle	Subt
SPK-Level	Red

Original	Recharge
Audio	Dual
Angle	Format
Zoom	Eject
VFP/Scan Mode	Green
Play Mode	+ Shift + Play
Level+	Ch +
Level-	Ch -
Tv CH+	+ Shift + Ch -
Tv CH-	+ Shift + Ch +
Cancel	Exit
Audio Vol+	Vol +
Audio Vol-	Vol -
TV Vol+	+ Shift + Vol -
Tv Vol-	+ Shift + Vol +
Muting	Mute

