




 







 



 
 


 

 

 
 




 




 






 
 
 

 
 
 






 
 














Original	Rechange	Original	Rechange
 Power	 Power	 Pause	 Pause
 Dimmer	 Options	 >>I	 >>I
 Clock	 Shift + AV	 <</Tune-	 <<
 Sleep	 Sleep	 Stop	 Stop
 Internet Radio	 TV/R	 >>/Tune+	 >>
 Online Music	 Media	 ADD	 Back
 Music Server	 Smart	 Call/Favorites	 Pre Ch
 Tuner	 Green	 DBB/Tone	 List
 Analog In	 Red	 Vol+	 Vol +
 Digital In	 Blue	 Vol-	 Vol -
 USB	 AV	 Mute	 Mute
 Bluetooth	 Format	 Info	 Info
 CD	 Yellow	 Volume A/B	 D. Menu
 CH+	 Ch +	 Search	 Shift + TV/R
 CH-	 Ch -	 Setup	 Menu
 I<<	 I<<	 Up	 Up
 Play	 Play	 Down	 Down





	Original	Rechange		Original	Rechange	
	Right			Mode/Program		Subt
	Left			A/B Speaker		Dual
	Enter					
	1					
	2					
	3					
	4					
	5					
	6					
	7					
	8					
	9					
	0					
	+10					
	Clear					
	X/Random					
	Repeat					

