
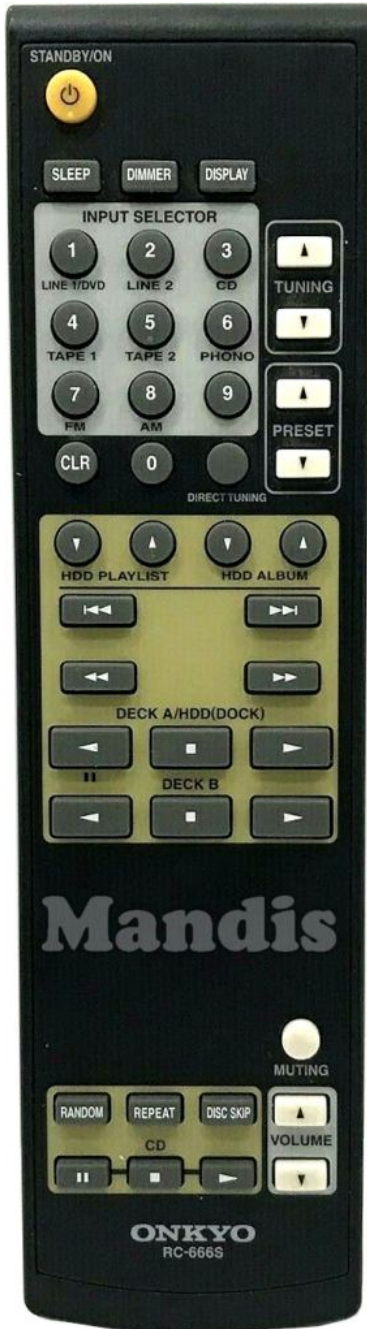


Original	Rechange
 STANDBY/ON	 Power
 SLEEP	 Sleep / Timer
 DIMMER	 Shift + Mute / Dimmer
 DISPLAY	 Display / Media
 1 LINE 1/DVD	 1
 2 LINE 2	 2
 3 CD	 3
 TUNING UP	 CH+ / Page+
 4 TAPE 1	 4
 5 TAPE 2	 5
 6 PHONO	 6
 TUNING DOWN	 CH- / Page-
 7 FM	 7
 8 AM	 8
 9	 9
 PRESET UP	 Shift + >>I / Preset+
CLR	Exit / Cancel / Clear

Original	Rechange
 0	 0
 DIRECT TUNING	 D.Menu / Top
 PRESET DOWN	 Shift + I<< / Preset-
 HDD PLAY LIST	 Shift + Down
 HDD PLAYLIST	 Shift + Up
 HDD ALBUM	 Down
 HDD ALBUM UP	 Up
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 PAUSE	 Pause / Step / Freeze
 PLAY < DECK A/HDD DOCK	 Shift + << /
 STOP DECK A/HDD DOCK	 Rec / Rec Mode
 PLAY > DECK A/HDD DOCK	 Play / Slow
 PLAY < DECK B	 Sound / Title
STOP DECK B	Stop / Hold





Original	Recharge	
PLAY > DECK B	Shift + TUNE+ >> /	
MUTING	Mute / Dimmer	
RANDOM	Blue / Prime Video / Random	
REPEAT	Green / APP / Repeat	
DISC SKIP	Back / Return	
VOL+	Vol+	
CD PAUSE	Shift + Pause / Step /	
CD STOP	Shift + Stop /	
CD PLAY	Shift + Play /	
VOL-	Vol-	

Original	Recharge	

