





 


 
 

 

 

 
 
 









 





 
 
 







Original	Recharge
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV	 TV/R
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Recharge
 Home/@	 Smart
 +P	 Ch +
 -P	 Ch -
 Menu	 Menu
 Q.Menu	 D. Menu
 Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 WWW	 Media
 Music/Photo/Video	 Options
 Guide	 Guide
 Help	 Info
 */O	 Format





Original	Recharge	Original	Recharge
[=]	Text		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Lang.	Dual		
Sleep	Sleep		
[-O-]	Subt		
<<	<<		
Pause	Pause		
>>	>>		
Rec	Rec		
Play	Play		
Stop	Stop		

