 
 
 
 


 
 



 

 
 


 
 







 




 


 










 



 



 
 


 


 


 
 
 
 


 






 
 


Original	Recharge
 Power Receiver	 Power
 HDMI 1	 Shift + 1
 HDMI 2	 Shift + 2
 HDMI 3	 Shift + 3
 HDMI 4	 Shift + 4
 [A]	 List
 V-AUX	 AV
 AV 1	 Shift + 5
 AV 2	 Shift + 6
 AV 3	 Shift + 7
 AV 4	 Shift + 8
 AV 5	 Shift + 9
 AV 6	 Shift + 0
 Audio	 Shift + Dual
 Dock	 Smart
 Tuner	 Yellow
 USB	 Shift + AV

Original	Recharge
 FM	 TV/R
 AM	 Shift + TV/R
 Memory	 Rec
 Preset+	 Shift + Ch +
 Preset-	 Shift + Ch -
 Tuning+	 Ch +
 Tuning-	 Ch -
 Info	 Info
 Movie	 Subt
 Music	 Shift + Subt
 Sur. Decode	 Dual
 Straight	 Eject
 Sleep	 Sleep
 Enhancer	 Text
 Direct	 Format
 BD/DVD	 Red
 TV	 Green



 


 






Original	Rechange	Original	Rechange
 Setup	 Options	 Mode	 Media
 Radio	 3D	 Play	 Play
 Vol+	 Vol +	 <<	 <<
 Vol-	 Vol -	 >>	 >>
 Option	 Shift + Options	 <<	 <<
 Up	 Up	 >>	 >>
 Down	 Down	 1	 1
 Right	 Right	 2	 2
 Left	 Left	 3	 3
 Enter	 Ok	 4	 4
 Return	 Back	 5	 5
 Display	 Shift + Info	 6	 6
 Top Menu	 Menu	 7	 7
 Pop-Up Menu	 D. Menu	 8	 8
 Mute	 Mute	 9	 9
 Stop	 Stop	 0	 0
 Pause	 Pause	 +10	 Guide





Original	Rechange
 Power Source	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Ent	 Pre Ch
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<

Original	Rechange
 >>	 >>
 <<	 <<
 >>	 >>
 Display	 Info

