 
 




Original		Rechange		Original		Rechange	
	Power		Power		Quick Select 2		Text
	Input TV Audio		1		Quick Select 3		Eject
	Input Tuner		2		Quick Select 4		AV
	Input Bluetooth		3		CH + / Page +		Ch +
	Input Phono		4		CH - / Page -		Ch -
	Input USB		5		Eco		3D
	Input HEOS		6		Mute		Mute
	Input Internet Radio		7		Volume +		Vol +
	Input CBL/SAT		8		Volume -		Vol -
	Input DVD		9		Info		Info
	Input Blu-ray		Guide		Option		Options
	Input Aux1		0		Setup		Menu
	Input Game		Pre Ch		Back		Back
	Input Aux2		Shift + Smart		Back		Exit
	Input Media		Media		Up		Up
	Input CD		Smart		Down		Down
	Quick Select 1		D. Menu		Right		Right





Original	Rechange
	Left
	Ok
	I<<< / Tune -
	Play
	>>>I / Tune +
	<<<
	Pause
	Stop
	>>>
	Green / Sound Mode Movie
	Red / Sound Mode Music
	Blue / Sound Mode Game
	Yellow / Sound Mode Pure
	Shift + 1
	Shift + 2
	Shift + 3
	Shift + 4

Original	Rechange
	Shift + 5
	Shift + 6
	Shift + 7
	Shift + 8
	Shift + 9
	Shift + 0
	Shift + Pre Ch
	Sleep





Original		Rechange		Original		Rechange	
	Power		Power		Quick Select 2		Text
	Input TV Audio		1		Quick Select 3		Eject
	Input Tuner		2		Quick Select 4		AV
	Input Bluetooth		3		CH + / Page +		Ch +
	Input Phono		4		CH - / Page -		Ch -
	Input USB		5		Mute		Mute
	Input HEOS		6		Volume +		Vol +
	Input Internet Radio		7		Volume -		Vol -
	Input CBL/SAT		8		Up		Up
	Input DVD		9		Down		Down
	Input Blu-ray		Guide		Right		Right
	Input Aux1		0		Left		Left
	Input Game		Pre Ch		Enter		Ok
	Input Aux2		Shift + Smart		Back		Back
	Input Media		Media		Back		Exit
	Input CD		Smart		I<< / Tune -		I<<
	Quick Select 1		D. Menu		Play		Play

 
 

 







 




	Original	Rechange	Original	Rechange
	>> / Tune +			
	<<			
	Pause			
	Stop			
	>>			
	1	 +  Shift + 1		
	2	 +  Shift + 2		
	3	 +  Shift + 3		
	4	 +  Shift + 4		
	5	 +  Shift + 5		
	6	 +  Shift + 6		
	7	 +  Shift + 7		
	8	 +  Shift + 8		
	9	 +  Shift + 9		
	0	 +  Shift + 0		
	Enter	 +  Shift + Pre Ch		
	Sleep	 Sleep		





Original		Rechange		Original		Rechange	
	Quick Select 1		D. Menu		Input Game		Pre Ch
	Enter	 + 	Shift + Pre Ch		Input Aux2	 + 	Shift + Smart
	Quick Select 4		AV		Input Media		Media
	Quick Select 3		Eject		Input CD		Smart
	Quick Select 2		Text		CH + / Page +		Ch +
	Power		Power		CH - / Page -		Ch -
	Input TV Audio		1		Mute		Mute
	Input Tuner		2		Volume +		Vol +
	Input Bluetooth		3		Volume -		Vol -
	Input Phono		4		Up		Up
	Input USB		5		Down		Down
	Input HEOS		6		Right		Right
	Input Internet Radio		7		Back		Exit
	Input CBL/SAT		8		Left		Left
	Input DVD		9		Enter		Ok
	Input Blu-ray		Guide		Back		Back
	Input Aux1		0		I<< / Tune -		I<<





Original		Recharge	
	Play		Play
	>>I / Tune +		>>I
	<<		<<
	Pause		Pause
	1	+	Shift + 1
	2	+	Shift + 2
	3	+	Shift + 3
	4	+	Shift + 4
	5	+	Shift + 5
	6	+	Shift + 6
	7	+	Shift + 7
	8	+	Shift + 8
	9	+	Shift + 9
	0	+	Shift + 0
	Stop		Stop
	>>		>>
	Sleep		Sleep

Original		Recharge	

