



Original		Rechange		Original		Rechange	
	Standby		Power		Green/Smart		Green
	1		1		Yellow/Lock		Yellow
	2		2		Blue/Sleep		Blue
	3		3		Menu		Menu
	4		4		Teletext		Text
	5		5		P+		Ch +
	6		6		P-		Ch -
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	P<P		Pre Ch		OK		Ok
	Clear		Exit		Vol+		Vol +
	Mute		Mute		Vol-		Vol -
	Record		Rec		>I/Index		Format
	Timer		AV		>I</Still		3D
	Red/Select		Red		<<		<<





Original	Recharge	Original	Recharge
STOP 	Stop		Stop
PLAY 	Play	PLAY MODE 	Play
	>>		>>

