











 













 

 

 

 
















Original	Recharge	Original	Recharge
Guide	Guide / EPG / -/--	Play	Play / Slow
Power	Power	Pause	Pause / Step / Freeze
Eject	Eject / Surround	<<	<< / Tune-
Tv/Radio	TV/Radio /	>>	>> / Tune+
Red/Goto	Red / Netflix / Search	D.Setup	Setup / OPT /
Green/Angle	Green / APP / Repeat	Rec	Rec / Rec Mode
Yellow/Repeat	Yellow / YouTube / Repeat	Stop	Stop / Hold
Blue/A-B	Blue / Prime Video / Random	I<<	I<< / Preset-
FAV	Fav / Marker / PC	>>I/Index	>>I / Preset+
Text	Text / Goto	Menu	Menu / Home
Freeze/Hold	Shift + Pause / Step /	Lang/Audio	Audio / Lang I/II
D.Menu	D.Menu / Top	Up	Up
Subtitle	Subtitle / EQ	Left	Left
Zoom/Size	Zoom / Size	OK	OK
Aspect	Shift + Picture / Format	Right	Right
Subpage	Info / Angle	Sleep	Sleep / Timer
Media	Shift + Display / Media	Down	Down

Original	Recharge	Original	Recharge
Guide	Guide / EPG / -/--	Play	Play / Slow
Power	Power	Pause	Pause / Step / Freeze
Eject	Eject / Surround	<<	<< / Tune-
Tv/Radio	TV/Radio /	>>	>> / Tune+
Red/Goto	Red / Netflix / Search	D.Setup	Setup / OPT /
Green/Angle	Green / APP / Repeat	Rec	Rec / Rec Mode
Yellow/Repeat	Yellow / YouTube / Repeat	Stop	Stop / Hold
Blue/A-B	Blue / Prime Video / Random	I<<	I<< / Preset-
FAV	Fav / Marker / PC	>>I/Index	>>I / Preset+
Text	Text / Goto	Menu	Menu / Home
Freeze/Hold	Shift + Pause / Step /	Lang/Audio	Audio / Lang I/II
D.Menu	D.Menu / Top	Up	Up
Subtitle	Subtitle / EQ	Left	Left
Zoom/Size	Zoom / Size	OK	OK
Aspect	Shift + Picture / Format	Right	Right
Subpage	Info / Angle	Sleep	Sleep / Timer
Media	Shift + Display / Media	Down	Down





Original	Recharge
 Title/Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 +  Shift + Guide / EPG / -/--

Original	Recharge
 0	 0
 Back	 Back / Return
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title

