













| Original | Rechange |
|---|---|
|  Power |  Power |
|  Muting |  Mute / Dimmer |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  << / Slow/Tune- |  << / Tune- |
|  Tuning+ / Slow |  >> / Tune+ |
|  I<< / Preset- |  I<< / Preset- |
|  >> I / Preset+ |  >> I / Preset+ |
|  Bass Level |  Sound / Title |
|  Audio |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |
|  Open/Close |  Eject / Surround |
|  Band |  Picture / Format |
|  Sleep |  Sleep / Timer |
|  Tv/Video |  TV/Radio / |
|  DVD Menu |  D.Menu / Top |

| Original | Rechange |
|---|---|
|  DVD Setup |  Setup / OPT / |
|  Name |  Text / Goto |
|  AMP Menu |  Menu / Home |
|  Up |  Up |
|  Angle |  Info / Angle |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Clear |  Exit / Cancel / Clear |
|  Down |  Down |
|  Return |  Back / Return |
|  Vol+ |  Vol+ |
|  Memory |  Smart / List |
|  Vol- |  Vol- |
|  Display |  Display / Media |
|  1 |  1 |
|  2 |  2 |





| Original | Rechange |
|---------------|---|
| 3 | CD - STB 3 |
| 4 | VIDEO 4 |
| 5 | TAPE 5 |
| 6 | TUNER 6 |
| 7 | AUX - HDD 7 |
| 8 | USB 8 |
| 9 | BLUETOOTH 9 |
| >10 | GUIDE EPG Guide / EPG / -/-- |
| 0 | HDMI - BAT 0 |
| REPEAT | APP REPEAT Green / APP / Repeat |
| PLAY MODE | SHIFT + SLOW Shift + Play / |
| STEREO/MONO | SHIFT + LANG I/II Shift + Audio / Lang I/II |
| FUNCTION | SHIFT + OPT-TOOLS SETUP Shift + Setup / OPT / Tools |
| DVD TOP MENU | SHIFT + HOME MENU Shift + Menu / |
| SOUND FIELD + | SHIFT + + VOL Shift + Vol+ |
| NIGHT MODE | SHIFT + LIST SMART Shift + Smart / List |
| SOUND FIELD - | SHIFT + VOL - Shift + Vol- |

| Original | Rechange |
|-------------|-------------------------|
| ENTER | SHIFT + TV 1 Shift + 1 |
| DVD DISPLAY | SHIFT + DVD 2 Shift + 2 |





| Original | Recharge | Original | Recharge |
|---|--|----------|----------|
|  Power Tv |  Power | | |
|  1 |  1 | | |
|  2 |  2 | | |
|  3 |  3 | | |
|  4 |  4 | | |
|  5 |  5 | | |
|  6 |  6 | | |
|  7 |  7 | | |
|  8 |  8 | | |
|  9 |  9 | | |
|  0/10 |  0 | | |
|  0/-- |  Guide / EPG / 0/-- | | |
|  Enter |  OK | | |
|  Tv Vol+ |  Vol+ | | |
|  Tv CH+ |  CH+ / Page+ | | |
|  Tv Vol- |  Vol- | | |
|  Tv CH- |  CH- / Page- | | |

| Original | Recharge |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

