






Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Red/Rec/Instant		Red		Vol+		Vol +
	Green/←		Green		Vol-		Vol -
	Yellow/Stop		Yellow		Mute		Mute
	Blue/play		Blue		P+		Ch +
	White/→/□		→		P-		Ch -
	→◆		D. Menu		1		1
	[]		Guide		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[◆]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch





Original		Recharge		Original		Recharge	
	[i+]		Info				
	I-II		Dual				
	[> <]		Subt				
	[1 2]		3D				
	[]->		AV				
	Smart		Smart				
	[] Smart		Media				
	[<>]		Back				
	[-o-]/Active Control		Options				





Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/Left		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/Right		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[♦]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual


 





 




Original	Rechange	Original	Rechange
[> <]	Subt		
[1 2]	3D		
[]→	AV		
J Smart	Smart		
[] Smart	Media		
[<>]	Back		
[-o-]/Active Control	Options		





Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/Left		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/Right		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[♦]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual





Original	Recharge
[> <]	Subt
[1 2]	3D
[]->	AV
♪ Smart	Smart
[] Smart	Media
[<>]	Back
[-o-]/Active Control	Options

Original	Recharge

