





 


 




 

 
 



 


 
 

 
 
 

 

 

 

 
 
 

 

 


 
 
 
 
 
 
 
 
 
 
 


 
 

 

 
 




Original		Recharge		Original		Recharge	
	Standby		Power		Down		Down
	Rec PVR		Rec		Right		Right
	List PVR		List		Left		Left
	Mute		Mute		OK		Ok
	EPG		Guide		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Info		Info		1		1
	DTV/VCR		Media		2		2
	TTX		Text		3		3
	Subtitle		Subt		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Favourite		Pre Ch		7		7
	Tv/Radio		TV/R		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		Recall		Back






 







 

 
 



 


 
 
 

 
 

 

 

 

 

 
 
 

 

 


 
 
 
 
 
 
 
 
 
 
 


 
 

 

 
 




Original		Rechange		Original		Rechange	
	Goto		Options				
	<<		<<				
	>>		>>				
	<<		<<				
	>>		>>				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Repeat	+	Shift + Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				





Original		Recharge		Original		Recharge	
	Standby		Power		Down		Down
	Rec PVR		Rec		Right		Right
	List PVR		Smart		Left		Left
	Mute		Mute		OK		Ok
	EPG		Guide		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Info		Info		1		1
	DTV/VCR		Media		2		2
	TTX		Text		3		3
	Subtitle		Subt		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Favourite		Pre Ch		7		7
	Tv/Radio		TV/R		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		Recall		Back





	Original	Rechange	Original	Rechange
	Goto	AV		
	<<	<<		
	>>	>>		
	I<<	I<<		
	>>I	>>I		
	Play	Play		
	Pause	Pause		
	Stop	Stop		
	Repeat	+ Shift + Text		
	Red	Red		
	Green	Green		
	Yellow	Yellow		
	Blue	Blue		

