
 




 


 
 


 



 

 





Original		Rechange		Original		Rechange	
	Power		Power		Right		Right
	Info		Info / Angle		Vol+		Vol+
	Lang		Audio / Lang I/II		List		Smart / List
	Mute		Mute / Dimmer		CH-		CH- / Page-
	[...]		Subtitle / EQ		Down		Down
	♥		Fav / Marker / PC		←		Back / Return
	▲		Shift + Up		1		1
	[≡]		Text / Goto		2		2
	EPG		Guide / EPG / -/--		3		3
	▼		Shift + Down		[<>]		Picture / Format
	Menu		Menu / Home		4		4
	CH+		CH+ / Page+		5		5
	Up		Up		6		6
	Exit		Exit / Cancel / Clear		TV/R		TV/Radio /
	Left		Left		7		7
	Vol-		Vol-		8		8
	OK		OK		9		9





Original	Recharge
0	HDMI - BAT 0
PREV I<<	PRESET- I<< / Preset-
FRW <<	TUNE- << / Tune-
FFW >>	TUNE+ >> / Tune+
NEXT >>I	PRESET+ >>I / Preset+
PLAY Play	SLOW Play / Slow
PAUSE Pause	STEP - FREEZE Pause / Step / Freeze
STOP Stop	HOLD Stop / Hold
REC Rec	REC MODE Rec / Rec Mode
TIMER Red/Timer	TIMER SLEEP Sleep / Timer
TIMER Red/Timer	NETFLIX SEARCH Red / Netflix / Search
EJECT Eject	SURROUND Eject / Surround
EJECT Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random

Original	Recharge

