



Original	Rechange
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
---	Shift + Guide / EPG / ---
Recall	Back / Return
Sleep	Sleep / Timer
Audio	Audio / Lang I/II
Aspect	Shift + Picture / Format

Original	Rechange
Input	AV / Input / RDS
Info	Info / Angle
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Up	Up
Down	Down
Right	Right
Left	Left
OK	OK
Vol+	Vol+
Vol-	Vol-
FAV	Fav / Marker / PC
P.Mode	Picture / Format
S.Mode	Sound / Title
CH+	CH+ / Page+
CH-	CH- / Page-
Red	Red / Netflix / Search





Original	Recharge
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Home	Shift + Menu /
Setup	Setup / OPT /
Refresh	Display / Media
Text	Text / Goto
Play	Play / Slow
EPG/Mouse	Guide / EPG / -/--
I<<	I<< / Preset-
Stop/Reveal	Stop / Hold
Rec	Rec / Rec Mode
Size	Zoom / Size
Pause/Mix	Pause / Step / Freeze
<</Hold	<< / Tune-
Tv/Radio	TV/Radio /
>>/Subpage	>> / Tune+

Original	Recharge
Index	Smart / List
Sub-T	Subtitle / EQ
>>I/Cancel	>>I / Preset+
T-Shift	Eject / Surround

