




 
 

 
 
 





 
 



 


 
 


 
 


 
 
 
 

 

 
 
 
 
 

 



 

 
 
 

 
 




 
 

 

 





Original		Rechange		Original		Rechange	
	Standby		Power		Down		Down
	PVR Rec		Rec		Right		Right
	PVR List		List		Left		Left
	Mute		Mute		OK		Ok
	EPG		Guide		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Info		Info		1		1
	DTV/VCR		Smart		2		2
	TTX		Text		3		3
	Subtitle		Subt		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Tv/Radio		TV/R		7		7
	Favourite		Pre Ch		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		Recall		Back







 

 
 
 





 
 



 


 
 


 
 

 
 
 
 
 

 

 
 
 
 
 

 





 
 
 

 
 
 



 
 

 

 
 




Original		Rechange		Original		Rechange	
	Goto		3D				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	RPT		Media				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				





Original	Recharge	Original	Recharge
 Standby	 Power	 Down	 Down
 PVR Rec	 Rec	 Right	 Right
 PVR List	 List	 Left	 Left
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Info	 Info	 1	 1
 DTV/VCR	 Smart	 2	 2
 TTX	 Text	 3	 3
 Subtitle	 Subt	 4	 4
 Menu	 Menu	 5	 5
 Exit	 Exit	 6	 6
 Tv/Radio	 TV/R	 7	 7
 Favourite	 Pre Ch	 8	 8
 CH+	 Ch +	 9	 9
 CH-	 Ch -	 0	 0
 Up	 Up	 Recall	 Back





	Original	Rechange	Original	Rechange
	Goto	 3D		
	<<			
	>>			
	1<<			
	>>1			
	Play			
	Pause			
	Stop			
	RPT			
	Red	 A		
	Green	 B		
	Yellow	 C		
	Blue	 D		

