



 



































































Original		Rechange		Original		Rechange	
	3D		Picture / Format		Up/CH+		Up
	Power		Power		Left/Vol-		Left
	Mute		Mute / Dimmer		OK		OK
	1		1		Right/Vol+		Right
	2		2		Down/CH-		Down
	3		3		Menu		Menu / Home
	4		4		Exit		Exit / Cancel / Clear
	5		5		Info		Info / Angle
	6		6		EPG		Guide / EPG / -/--
	7		7		List		Smart / List
	8		8		TXT		Text / Goto
	9		9		S-T		Sound / Title
	Prog+		CH+ / Page+		Tv/R		TV/Radio /
	0		0		Timer		Sleep / Timer
	Vol+		Vol+		Audio		Audio / Lang I/II
	Prog-		CH- / Page-		Play		Play / Slow
	Vol-		Vol-		Pause		Pause / Step / Freeze





Original	Recharge	Original	Recharge
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	←		Back / Return
	<<		<< / Tune-
	Red		Red / Netflix / Search
	>>		>> / Tune+
	Green		Green / APP / Repeat
	<<		<< / Preset-
	Yellow		Yellow / YouTube / Repeat
	>>		>> / Preset+
	Blue		Blue / Prime Video / Random

