 

 

 





 

 



 



 





 



 

 

 



 

 

 











 
 



 
 

 


 
 





Original		Rechange		Original		Rechange	
	Standby		Power		Right		Right
	Rec PVR		Rec / Rec Mode		Vol+		Vol+
	List PVR		Smart / List		Favourite		Fav / Marker / PC
	Mute		Mute / Dimmer		CH-		CH- / Page-
	EPG		Guide / EPG / -/-		Down		Down
	Info		Info / Angle		Tv/Radio		TV/Radio /
	TTX		Text / Goto		1		1
	Audio		Audio / Lang I/II		2		2
	DTV/VCR		AV / Input / RDS		3		3
	Subtitle		Subtitle / EQ		Recall		Back / Return
	Menu		Menu / Home		4		4
	CH+		CH+ / Page+		5		5
	Up		Up		6		6
	Exit		Exit / Cancel / Clear		Goto		Shift + Text /
	Left		Left		7		7
	Vol-		Vol-		8		8
	OK		OK		9		9



 

 

 





 













 


 







 

 







 





 











Original	Recharge	Original	Recharge
	0		0
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	RPT		Shift + Green / APP /
	Red/Zoom		Zoom / Size
	Red/Zoom		Red / Netflix / Search
	Green/←		Green / APP / Repeat
	Yellow/→		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Recharge





Original		Rechange		Original		Rechange	
	Standby		Power		Right		Right
	Rec PVR		Rec / Rec Mode		Vol+		Vol+
	List PVR		Smart / List		Favourite		Fav / Marker / PC
	Mute		Mute / Dimmer		CH-		CH- / Page-
	EPG		Guide / EPG / -/-		Down		Down
	Info		Info / Angle		Tv/Radio		TV/Radio /
	TTX		Text / Goto		1		1
	Audio		Audio / Lang I/II		2		2
	DTV/VCR		AV / Input / RDS		3		3
	Subtitle		Subtitle / EQ		Recall		Back / Return
	Menu		Menu / Home		4		4
	CH+		CH+ / Page+		5		5
	Up		Up		6		6
	Exit		Exit / Cancel / Clear		Goto		Shift + Text /
	Left		Left		7		7
	Vol-		Vol-		8		8
	OK		OK		9		9





Original	Rechange
	
<<	
>>	
I<<	
>>I	
Play	
Pause	
Stop	
RPT	
Red/Zoom	
Red/Zoom	
Green/←	
Yellow/→	
Blue	

Original	Rechange

