
 
 
 


 
 




 
 






Original		Rechange		Original		Rechange	
	Power		Power		Exit		Exit
	TV/AV		AV		Vol+		Vol +
	TV/TXT		Text		Vol-		Vol -
	Cancel		Media		Channel List		List
	Reveal		D. Menu		Mute		Mute
	DTV		Smart		EPG		Guide
	Hold		Options		Info		Info
	Size		Format		Up		Up
	Subpage		Shift + Subt		Down		Down
	Index		Shift + Info		Right		Right
	Red		Red		Left		Left
	Green		Green		OK		Ok
	Yellow		Yellow		1		1
	Blue		Blue		2		2
	CH+		Ch +		3		3
	CH-		Ch -		4		4
	Menu		Menu		5		5





Original	Rechange	Original	Rechange
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Picture	+	Shift + Format
	Recall		Back
	Sound		Dual
	Sleep		Sleep
	Nicam/A2		Eject
	Subtitle		Subt
	Tv/Radio		TV/R
	<<		<<
	>>		>>
	Repeat	+	Shift + Text
	I<<		I<<

Original	Rechange	Original	Rechange
	>>I		>>I
	Play		Play
	Pause		Pause
	Aspect		3D

