




 


 

 










 



 








 




 
 
 
 

 

 
 



 
 
 
 
 



 

 

 
 


 




Original	Recharge
 Operate	 Power
 Timer On/Off	 Shift + AV
 Showview	 Media
 Eject	 Eject
 Display	 Info
 On Screen	 3D
 VCR/DVD Selector	 Smart
 VCR Menu	 Menu
 Function Control	 Options
 Prog/Repeat	 Text
 Angle	 Red
 Title	 List
 DVD Menu	 D. Menu
 Open/Close	 Shift + Eject
 Clear	 Exit
 Up	 Up
 Down	 Down

Original	Recharge
 Right	 Right
 Left	 Left
 Set	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/AM/PM	 Guide
 Zero Back	 Subt
 Skip Search	 Format
 Tv/VCR	 TV/R






 


 

 










 





 








 




 
 
 
 

 

 
 



 
 
 
 
 



 

 

 
 


 


Original		Rechange		Original		Rechange	
	VCR<DVD		Blue				
	Input Select		AV				
	<<		<<				
	Play		Play				
	>>		>>				
	Rec		Rec				
	Stop		Stop				
	Pause/Still		Pause				
	Tape Speed		Green				
	I<< Skip/DPSS-		I<<				
	Skip		>>I				
	I> Slow		Yellow				
	CH Up		Ch +				
	CH Down		Ch -				
	Audio Output		Dual				





Original	Recharge
 Operate	 Power
 Timer On/Off	 Shift + AV
 Showview	 Media
 Eject	 Shift + Eject
 Display	 Info
 On Screen	 3D
 VCR/DVD Selector	 Smart
 DVD Setup	 Menu
 Function Control	 Options
 Prog/Repeat	 Text
 Angle	 Red
 Open/Close	 Eject
 Title	 List
 DVD Menu	 D. Menu
 Return	 Back
 Up	 Up
 Down	 Down

Original	Recharge
 Right	 Right
 Left	 Left
 Enter	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--AM/PM	 Guide
 Zero Back	 Subt
 Skip Search	 Format
 Tv/VCR	 TV/R





Original		Rechange		Original		Rechange	
	VCR<DVD		Blue				
	Input Select		AV				
	<<		<<				
	Play		Play				
	>>		>>				
	Rec		Rec				
	Stop		Stop				
	Pause/Still		Pause				
	Tape Speed		Green				
	I<< Skip/DPSS-		I<<				
	Skip		>>I				
	I> Slow		Yellow				
	CH Up		Ch +				
	CH Down		Ch -				
	Audio Output		Dual				

