



Original		Rechange		Original		Rechange	
	Power Audio		Power		9		9
	Power Tv	+	Shift + Power		0		0
	Bluetooth Setting		Smart		10		Guide
	Rec Mode		Rec		>10		Pre Ch
	Title Search	+	Shift + TV/R		Sleep		Sleep
	Tv/Video		TV/R		A.STBY		Media
	Eco Dimmer		3D		Tv Channel +		Ch +
	Display/Chara		Info		Clock/Timer		AV
	Title Edit		D. Menu		Tv Channel -		Ch -
	1/Marc		1		Tv Vol+	+	Shift + Vol +
	2		2		Tv Vol-	+	Shift + Vol -
	3		3		Return		Back
	4		4		Top Menu/PG	+	Shift + Menu
	5		5		Menu/PL		Menu
	6		6		Audio Vol+		Vol +
	7		7		Audio Vol-		Vol -
	8		8		Cancel		Exit





Original		Recharge		Original		Recharge	
	Fade Muting		Mute		Tuner/Play	+	Shift + Play
	On Screen	+	Shift + Info		Play/Pause		Red
	Up		Up		Play/Pause		Green
	Down		Down		Play/Pause		Yellow
	Right		Right		Play/Pause Bluetooth		Blue
	Left		Left		Audio/MPX		Dual
	Enter/Set		Ok		Subtitle		Subt
	Stop		Stop		Zoom		Eject
	Play		Play		FM/AM/Audio In		Format
	Pause		Pause		File Type	+	Shift + Subt
	I<<		I<<		Angle		List
	I>>		I>>		Set Up		Options
	I<< Group/Title Skip	+	Shift + I<<		VFP/Scan Mode	+	Shift + 1
	I>> Group/Title Skip	+	Shift + I>>		3D Phonic/HP Surr	+	Shift + 2
	<<		<<		C.Voice	+	Shift + Mute
	>>		>>		DVD/Audio In	+	Shift + 3
	>> Group/Title	+	Shift + >>		Sound Mode	+	Shift + Dual



