

 






 
 
 

 
 
 

 



 





 







 












 
 

 

 



 







 











Original	Recharge	Original	Recharge
 Power	 Power	 Page Up	 >>
 Eco	 3D	 Page Down	 <<
 Sleep	 Sleep	 Green/Movie	 Green
 CBL/SAT	 1	 Red/Music	 Red
 DVD/Blu-ray	 2	 Blue/Game	 Blue
 Blu-ray	 3	 Yellow/Pure	 Yellow
 Game	 4	 Info	 Info
 AUX	 5	 Option	 Options
 Media Player	 6	 Back	 Back
 iPod/USB	 7	 Setup	 Menu
 Tv Audio	 8	 Up	 Up
 Tuner	 9	 Down	 Down
 Online Music	 Guide	 Right	 Right
 Bluetooth	 0	 Left	 Left
 Internet Radio	 Pre Ch	 Enter	 Ok
 Channel+	 Ch +	 Vol+	 Vol +
 Channel-	 Ch -	 Vol-	 Vol -

Original	Recharge	Original	Recharge
 MUTE	 MUTE	 >>	 >>
 TV	 TV	 <<	 <<
 DVD	 DVD	 B	 Green
 SAT	 SAT	 A	 Red
 AUX	 AUX	 D	 Blue
 PLAY MODE	 PLAY MODE	 C	 Yellow
 REC MODE	 REC MODE	 INFO	 Info
 PLAY	 PLAY	 OPT	 Options
 PAUSE	 PAUSE	 BACK	 Back
 STOP	 STOP	 RETURN	 Back
 <<<	 <<<	 BACK	 Back
 >>>	 >>>	 TOP MENU	 Menu
 DISC NAV	 DISC NAV	 UP	 Up
 LIST	 LIST	 DOWN	 Down
 DUAL	 DUAL	 RIGHT	 Right
 SUBT	 SUBT	 LEFT	 Left
 OPT	 OPT	 ENTER	 Ok
 PROG	 PROG	 VOL+	 Vol +
 SEARCH	 SEARCH	 VOL-	 Vol -
 PICTURE	 PICTURE		
 ECO	 ECO		
 SLEEP	 SLEEP		
 TV/R	 TV/R		
 FORMAT	 FORMAT		
 3D	 3D		
 E-MANUAL	 E-MANUAL		
 REPEAT	 REPEAT		
 ZOOM	 ZOOM		
 TIMER	 TIMER		
 D.MENU	 D.MENU		
 TEXT	 TEXT		
 UP	 UP		
 AV	 AV		
 TOP MENU	 TOP MENU		
 DISPLAY	 DISPLAY		
 MENU	 MENU		
 INFO	 INFO		
 CLEAR	 CLEAR		
 EXIT	 EXIT		
 RETURN	 RETURN		
 BACK	 BACK		
 VOL+	 VOL+		
 HOME	 HOME		
 SMART	 SMART		
 APP	 APP		
 MEDIA	 MEDIA		
 CH+	 CH+		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 GUIDE	 GUIDE		
 0	 0		
 PRE-CH	 PRE-CH		
 A	 A		
 B	 B		
 C	 C		
 D	 D		





Original	Recharge	Original	Recharge
 Mute	 Mute		
 >> /Tune+	 >>		
 <</Tune-	 <<		
 Play	 Play		
 Pause	 Pause		
 Quick Select 1	 Shift + 1		
 Quick Select 2	 Shift + 2		
 Quick Select 3	 Shift + 3		
 Quick Select 4	 Shift + 4		
 Power Zone 2	 Shift + Power		
 Source Zone 2	 AV		
 Vol+ Zone 2	 Shift + Vol +		
 Vol- Zone 2	 Shift + Vol -		

Original	Recharge

