





 
 

 
 
 

 


 




 

















 




 





Original		Recharge		Original		Recharge	
	Power		Power		Page Up		>>
	Eco		3D		Page Down		<<
	Sleep		Sleep		Green/Movie		Green
	CBL/SAT		1		Red/Music		Red
	DVD/Blu-ray		2		Blue/Game		Blue
	Blu-ray		3		Yellow/Pure		Yellow
	Game		4		Info		Info
	AUX		5		Option		Options
	Media Player		6		Back		Back
	iPod/USB		7		Setup		Menu
	Tv Audio		8		Up		Up
	Tuner		9		Down		Down
	Online Music		Guide		Right		Right
	Bluetooth		0		Left		Left
	Internet Radio		Pre Ch		Enter		Ok
	Channel+		Ch +		Vol+		Vol +
	Channel-		Ch -		Vol-		Vol -



