

 
 
 
 

 




 
 
 
 
 
 

 




 



 



 
 

 



 

 
 







 

 

 
 

 



 




 




 


Original	Rechange	Original	Rechange
 Power	 Power	 Tools	 Options
 TV	 TV/R	 Return	 Back
 1	 1	 Up	 Up
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Left	 Left
 5	 5	 Enter	 Ok
 6	 6	 Internet	 Smart
 7	 7	 Exit	 Exit
 8	 8	 Red	 Red
 9	 9	 Green	 Green
 0	 0	 Yellow	 Yellow
 Fav CH	 Shift + Pre Ch	 Blue	 Blue
 Pre Ch	 Pre Ch	 Vol +	 Vol +
 Info	 Info	 Vol -	 Vol -
 Menu	 Menu	 Source	 AV
 Guide	 Guide	 Mute	 Mute

Original	Rechange	Original	Rechange
 Power	 Power	 Tools	 Options
 TV	 TV/R	 Return	 Back
 1	 1	 Up	 Up
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Left	 Left
 5	 5	 Enter	 Ok
 6	 6	 Internet	 Smart
 7	 7	 Exit	 Exit
 8	 8	 Red	 Red
 9	 9	 Green	 Green
 0	 0	 Yellow	 Yellow
 Fav CH	 Shift + Pre Ch	 Blue	 Blue
 Pre Ch	 Pre Ch	 Vol +	 Vol +
 Info	 Info	 Vol -	 Vol -
 Menu	 Menu	 Source	 AV
 Guide	 Guide	 Mute	 Mute





Original		Rechange		Original	Rechange
	P +		Ch +		
	P -		Ch -		
	TTX / MIX		Text		
	Media.P		Media		
	Content		Shift + Smart		
	CH List		List		
	AD		Shift + Subt		
	Subt.		Subt		
	<<		<<		
	<<		I<<		
	Pause		Pause		
	>>		>>		
	>>		>>I		
	Rec		Rec		
	Play		Play		
	Stop		Stop		

