










 












 




 








Original	Recharge
Power	Power
D/A Input	Smart
Tv/Radio	TV/R
Input	AV
Bright+	Shift + Right
Bright-	Shift + Left
Simplink	Media
Text	Text
Ratio	Format
I/II	Dual
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Stop	Stop
Play	Play
Pause	Pause

Original	Recharge
Rec	Rec
I<<	I<<
<<	<<
>>	>>
>>I	>>I
Exit	Exit
Back	Back
Menu	Menu
Info	Info
Guide	Guide
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Vol+	Vol +
Vol-	Vol -










 
 







 





















 




Original	Rechange	Original	Rechange
 MUTE	Mute	 MUTE	Mute
 FAV	FAV	 FAV	Pre Ch
 PR+	PR+	 PR+	Ch +
 PR-	PR-	 PR-	Ch -
 1	1	 1	1
 2	2	 2	2
 3	3	 3	3
 4	4	 4	4
 5	5	 5	5
 6	6	 6	6
 7	7	 7	7
 8	8	 8	8
 9	9	 9	9
 0	0	 0	0
 LIST	List	 LIST	List
 Q.VIEW	Q.View	 Q.VIEW	Options
 UPDATE	[≡x]/Update	 UPDATE	Shift + TV/R

Original	Rechange	Original	Rechange
 INDEX	[≡i]/Index	 D.MENU	D. Menu
 TIME	[≡o]/Time	 SHIFT + CLEAR + EXIT	Shift + Exit
 SLEEP	Sleep	 SLEEP	Sleep
 HOLD	[≡+]/Hold	 3D	3D
 REVEAL	[≡?]/Reveal	 EJECT	Eject
 SUBTITLE	Subtitle	 SUBT	Subt













 



 
 

 








 









	Original	Rechange	Original	Rechange
	Power			4
	Stop			5
	Play			6
	Pause			7
	I<<			8
	<<			9
	>>			0
	>>			
	Menu			
	Up			
	Down			
	Right			
	Left			
	OK			
	1			
	2			
	3			





	Original	Recharge	Original	Recharge
	Power		Power	Power
	Input		AV	AV
	Stop		Stop	Stop
	Play		Play	Play
	Pause		Pause	Pause
	Rec		Rec	Rec
	<<		<<	<<
	>>		>>	>>
	PR+		Ch +	Ch +
	PR-		Ch -	Ch -
	1		1	1
	2		2	2
	3		3	3
	4		4	4
	5		5	5
	6		6	6
	7		7	7

