






 

 





 
 

 







 

 






 


 









Original	Recharge
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+	 Vol+
 Vol-	 Vol-
 Left	 Left
 Right	 Right
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Recharge
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 Play/Pause	 Pause / Step / Freeze
 I>/Resume	 Shift + Play /
 Surround	 Eject / Surround
 Sound	 Sound / Title
 Night	 Shift + Sleep / Timer
 Mute	 Mute / Dimmer
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Sleep	 Sleep / Timer
 DIM	 Shift + Mute / Dimmer
 Subw +	 Up
 Rear +	 Shift + CH+ /
 Center +	 CH+ / Page+
 Tv Vol+	 Shift + Vol+
 Subw -	 Down










 


 

















Original		Recharge	
	Rear -	 + 	Shift + CH- /
	Center -		CH- / Page-
	Tv Vol-	 + 	Shift + Vol-

Original		Recharge	





Original	Recharge
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Disc (DVD)	 D.Menu / Top
 0	 0
 Vol+	 Vol+
 System (DVD)	 Menu / Home
 Vol-	 Vol-
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Recharge
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 I>/Resume	 Shift + Play /





Original		Rechange	
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down

Original		Rechange	





Original		Rechange		Original		Rechange	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

