




 
 
 



 



 

 

 
 
 

 














Original	Rechange
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 Guide	 Guide
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Rechange
 CH List	 List
 P+	 Ch +
 P-	 Ch -
 Menu	 Menu
 Home	 Smart
 Content	 TV/R
 Tools	 Options
 Info/Clock	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green





Original		Rechange		Original		Rechange	
	Yellow		Yellow				
	Blue		Blue				
	Alarm		Pre Ch				
	3D		3D				
	Subt.		Subt				
	Stop		Stop				
	<<		<<				
	<<		<<				
	Play		Play				
	Pause		Pause				
	>>		>>				
	>>		>>				

