



Original	Recharge
Power Audio	Power
Display/Chara	Info
Tv/Video	TV/R
Level Meter	Media
Motion Sensor	Smart
Title/Del	Options
Eco/Dimmer	Shift + 3D
1/Mark	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Recharge
>10	Pre Ch
10	Guide
Karaoke Scoring	Shift + Smart
Reserve	Shift + Options
Vocal Masking	Shift + Dual
Vocal Support	Shift + Subt
Menu/PL	Menu
Top Menu/PG	Shift + Menu
On Screen	Shift + Info
Fade Muting	Mute
Up/PTY+	Up
Down/PTY-	Down
Right/TA/News/Inf	Right
Left/PTY Search	Left
Audio Vol+	Vol +
Audio Vol-	Vol -
Sleep	Sleep





Original		Rechange		Original		Rechange	
	A.Stby		Shift + 0		Audio/MPX		Dual
	Clock/Timer		AV		Subtitle		Subt
	Return		Back		Zoom		Eject
	Cancel		Exit		Tuner/Audio In		Text
	Set Up		D. Menu		File Type		Shift + TV/R
	Stop		Stop		Repeat		Shift + Text
	Play		Play		VFP/Scan Mode		Format
	Pause		Pause		3D Phonic/HP Surr		3D
	←/Tuner/Play		Shift + Back		C.Voice		Shift + List
	I<<		I<<		DVD/Audio In		Shift + Format
	>>I		>>I		Sound Mode		List
	<<		<<		My Sound		Shift + Mute
	>>		>>		V.Bass		Shift + 7
	Play/Pause		Blue		Super Bass		Ch +
	Play/Pause USB		Yellow		Super Bass Level-		Ch -
	Play/Pause iPod A		Red		Mic Vol+		Shift + Right
	Play/Pause iPod B		Green		Mic Vol-		Shift + Left



