


 





 



 
 
 



 
 
 
 










 



 


 
 







 

 

 
 








 








Original		Rechange		Original		Rechange	
	Power		Power		Mute		Mute
	Source		AV		P+		Ch +
	HDMI		D. Menu		P-		Ch -
	1		1		CH List		List
	2		2		Menu		Menu
	3		3		Guide		Guide
	4		4		Smart Hub		Smart
	5		5		Tools		Options
	6		6		Info		Info
	7		7		Back/Return		Back
	8		8		Exit		Exit
	9		9		Up		Up
	0		0		Down		Down
	TTX/MIX		Text		Right		Right
	PRE-CH		Pre Ch		Left		Left
	Vol+		Vol +		OK		Ok
	Vol-		Vol -		Red		Red





Original	Recharge	Original	Recharge
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Family Story	 Media		
 Search	 TV/R		
 P.Size	 Format		
 Support	 Eject		
 D	 3D		
 AD/Subt.	 Subt		
 <<<	 <<<		
 I<<<	 I<<<		
 Pause	 Pause		
 >>>	 >>>		
 >>>I	 >>>I		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

