


 

 
 
 
 
 





Original	Rechange	Original	Rechange
 Power	 Power	 USB	 AV
 Mute	 Mute	 Menu	 Menu
 1	 1	 EPG	 Guide
 2	 2	 Exit	 Exit
 3	 3	 Goto	 Smart
 4	 4	 Play	 Play
 5	 5	 Pause	 Pause
 6	 6	 <<	 <<
 7	 7	 >>	 >>
 8	 8	 Rec	 Rec
 9	 9	 Stop	 Stop
 0	 0	 UP	 Up
 Info	 Info	 Down	 Down
 FAV	 Pre Ch	 Right	 Right
 Page+	 >>	 Left	 Left
 Page-	 <<	 OK	 Ok
 Audio	 Dual	 CH+	 Ch +

Original	Rechange	Original	Rechange
 MUTE	 MUTE	 TV	 DVD
 MUTE	 MUTE	 SAT	 AUX
 1	 1	 PLAY MODE	 REC MODE
 2	 2	 PLAY	 PAUSE
 3	 3	 STOP	 EJECT
 4	 4	 <<	 >>
 5	 5	 DISC NAV	 SOUND
 6	 6	 AD	 SETTINGS
 7	 7	 LIST	 DUAL
 8	 8	 SUBT	 OPT
 9	 9	 PROG	 SEARCH
 0	 0	 PICTURE	 ECO
 Info	 Info	 SLEEP	 TV/R
 FAV	 FAV	 FORMAT	 3D
 Page+	 >>	 E-MANUAL	 REPEAT
 Page-	 <<	 ZOOM	 TIMER
 Audio	 AUDIO	 D.MENU	 TEXT
		 UP	 AV
		 DOWN	
		 LEFT	
		 RIGHT	
		 OK	
		 HOME	
		 SMART	
		 APP	
		 MEDIA	
		 VOL+	
		 VOL-	
		 CH+	
		 CH-	
		 1	
		 2	
		 3	
		 4	
		 5	
		 6	
		 7	
		 8	
		 9	
		 FAV	
		 GUIDE	
		 0	
		 PRE-CH	
		 A	
		 B	
		 C	
		 D	
		 Mandis SHOP	
		 www.mandis.tv	



