



Original		Rechange		Original		Rechange	
	Power		Power		Blue		Blue
	Input		AV		[≡]		Menu
	1		1		TXT		Text
	2		2		Back		Back
	3		3		Home		Smart
	4		4		Exit		Exit
	5		5		Up		Up
	6		6		Down		Down
	7		7		Right		Right
	8		8		Left		Left
	9		9		OK		Ok
	0		0		Vol+		Vol +
	Guide		Guide		Vol-		Vol -
	Subtitle		Subt		Mute		Mute
	Red		Red		CH.List		List
	Green		Green		CH+		Ch +
	Yellow		Yellow		CH-		Ch -





Original	Recharge	Original	Recharge
	<<		<<
	Play		Play
	>>		>>
	Pause		Pause
	Audio Only		Dual
	Stop		Stop
	Prime Video		Media
	You Tube		Shift + Media
	Netflix		Shift + Smart
	Rakuten TV		TV/R

