



Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 <	 Shift + Left
 >	 Shift + Right
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Original	Rechange
 Menu	 Menu
 Guide	 Guide
 i	 Info
 Exit	 Exit
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Vol +	 Vol +
 Vol -	 Vol -
 Mute	 Mute
 Filelist	 Smart
 Playlist	 Media
 P +	 Ch +
 P -	 Ch -
 <<	 <<





Original		Rechange		Original		Rechange	
	Play / Pause		Play		Help		D. Menu
	Play / Pause		Pause				
	>>		>>				
	Rec		Rec				
	Stop		Stop				
	l> Slow		>>l				
	Timeshift		Sleep				
	Mark		Pre Ch				
	Search		Shift + TV/R				
	Timer		AV				
	PIP		Options				
	V-Key		List				
	Text		Text				
	Audio		Dual				
	Subtitle		Subt				
	TV		TV/R				
	Radio		Format				

